HOME
DECORATORS
COLLECTION

BF-25128 KIDS STORAGE BENCH 28″HX40″W

INV#16262

ASSEMBLY INSTRUCTIONS

Made In China

THIS ITEM MUST BE ASSEMBLED BY AN ADULT

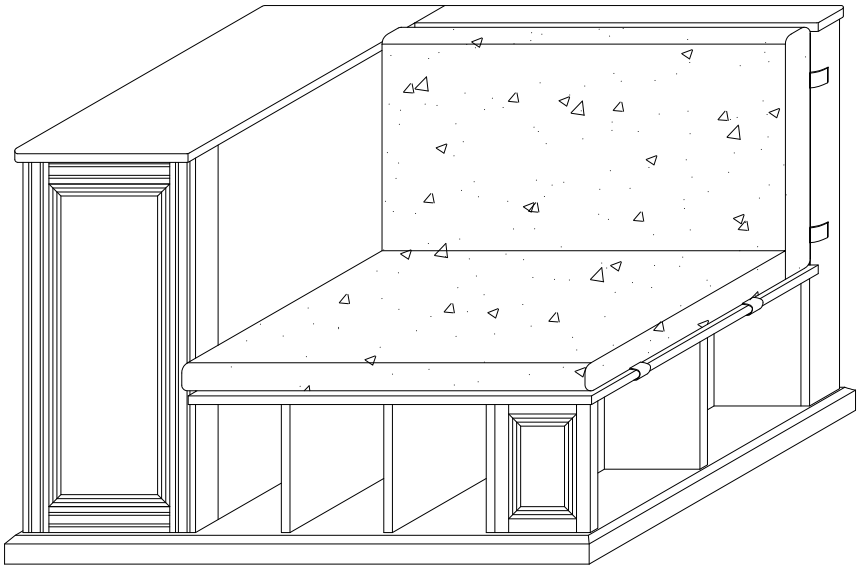

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  CABINET TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C  SEAT PANEL-1PC
D 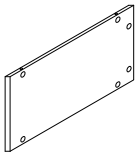 FRONT STAND PANELS-2PCS	E 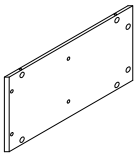 FRONT STAND PANEL-1PC	F  SMALL FRONT PANEL-1PC
G SEAT STAND PANEL-1PC	H  ACROSS PANEL-1PC	I CABINET STAND PANEL-1PC
J  FRONT PANEL-1PC	K 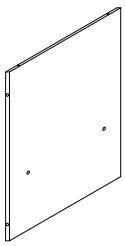 SIDE PANEL-1PC	L  BACK PANEL-1PC

M 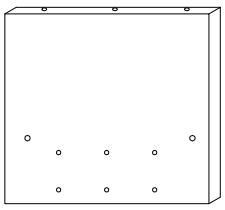 LARGE BACK PANEL-1PC	N SMALL TOP PANEL-1PC	O  CUSHION-1PC
P CAM-TOOL-1PC	Q  CAM-BOLTS-63PCS	R CAM-LOCKS-63PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

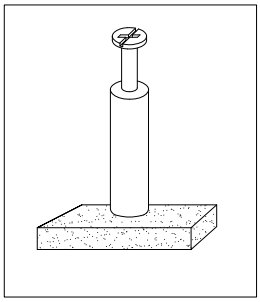

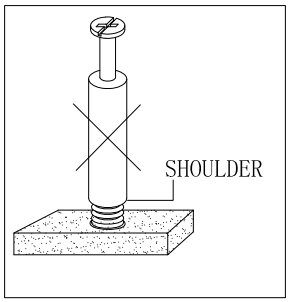

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

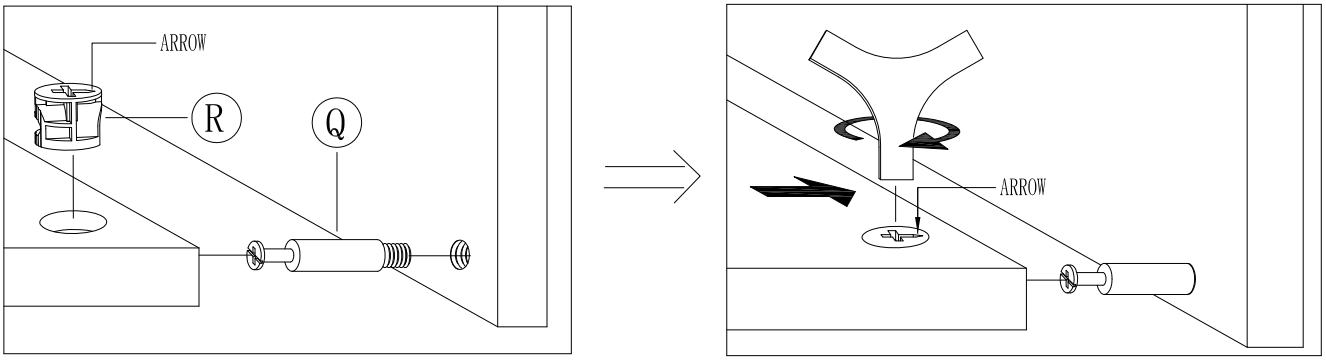

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

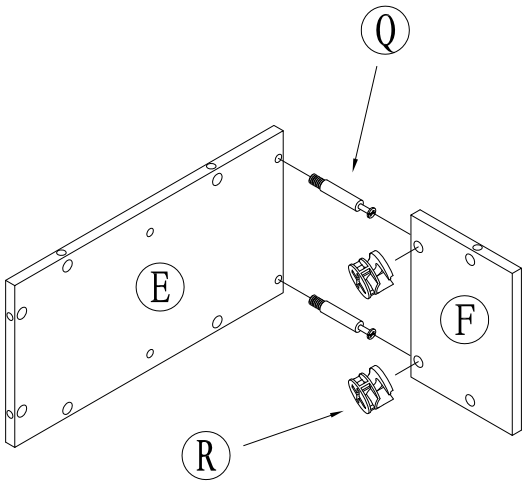

1). ASSEMBLE THE SMALL FRONT PANEL(F).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE FRONT STAND PANEL(E).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE SMALL FRONT PANEL(F) AND ATTACH USING 2 CAM-LOCKS(R).

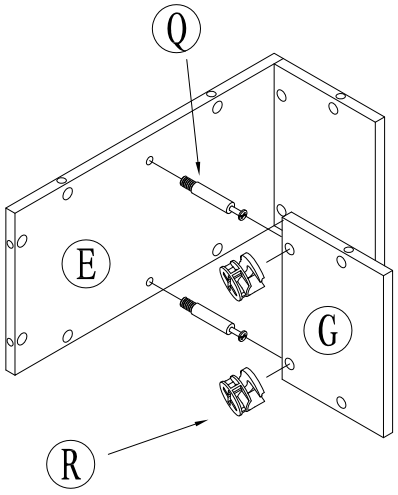

2). ASSEMBLE THE SEAT STAND PANEL(G).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE FRONT STAND PANEL(E).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE SEAT STAND PANEL(G) AND ATTACH USING 2 CAM-LOCKS(R).

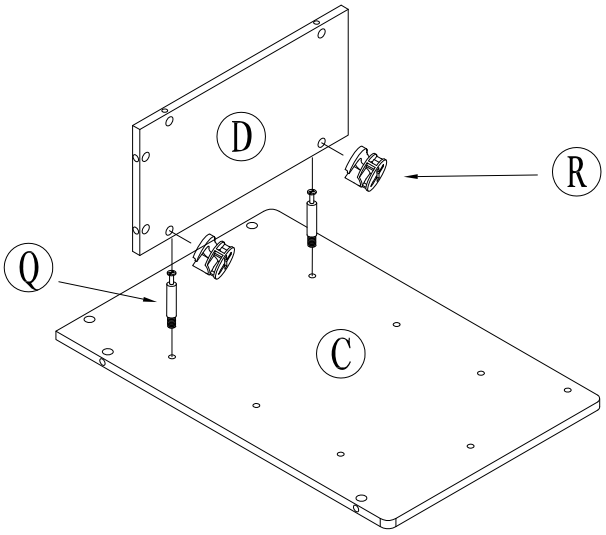

3). ASSEMBLE THE FRONT STAND PANEL(D).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE SEAT TOP PANEL(C).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE FRONT STAND PANEL(D) AND ATTACH USING 2 CAM-LOCKS(R).

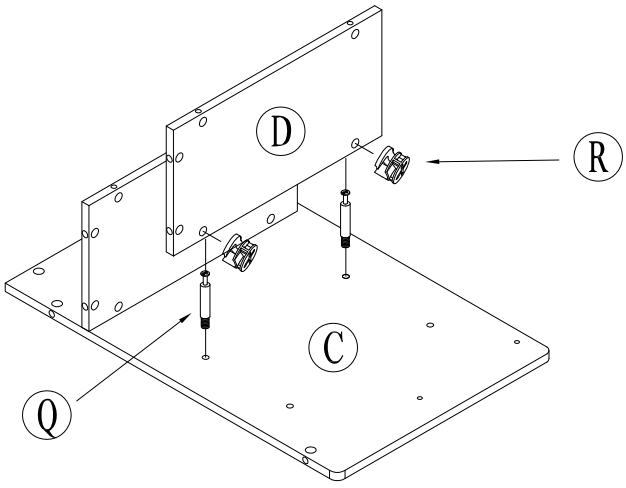

4). ASSEMBLE THE FRONT STAND PANEL(D).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE SEAT TOP PANEL(C).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE FRONT STAND PANEL(D) AND ATTACH USING 2 CAM-LOCKS(R).

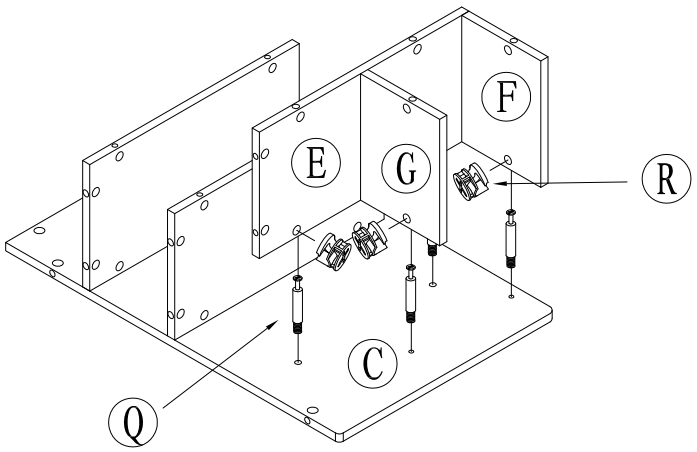

5). ASSEMBLE THE PANEL(E/F/G).

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE SEAT TOP PANEL(C).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(E/F/G) AND ATTACH USING 4 CAM-LOCKS(R).

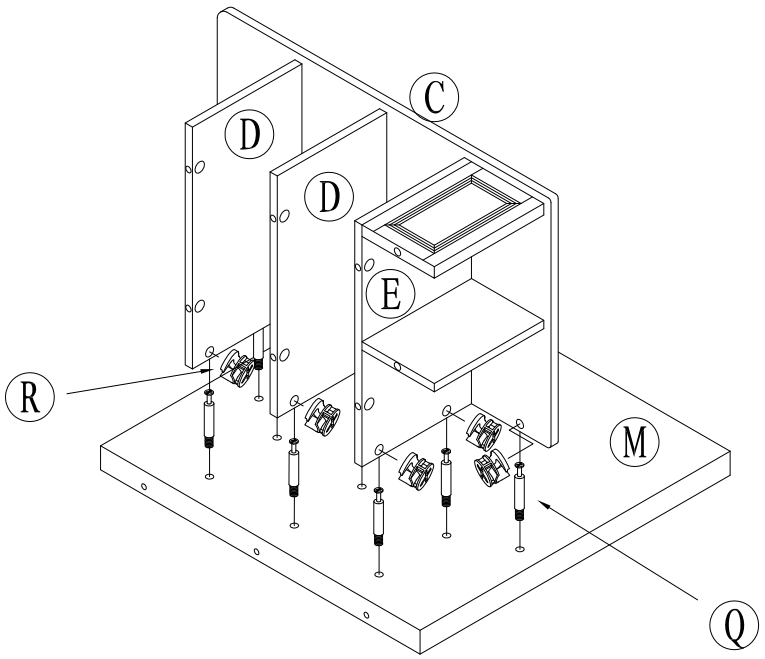

6). ASSEMBLE THE LARGE BACK PANEL(M).

- ROTATE 8 CAM-BOLTS(Q) INTO THE HOLES IN THE LARGE BACK PANEL(M).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(C/D/E) AND ATTACH USING 8 CAM-LOCKS(R).

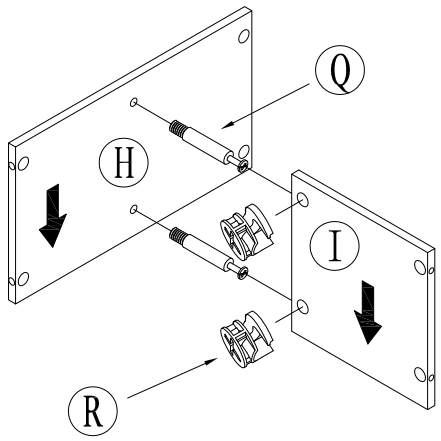

7). ASSEMBLE THE CABINET STAND PANEL(I).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE ACROSS PANEL(H).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE CABINET STAND PANEL(I) AND ATTACH USING 2 CAM-LOCKS(R).

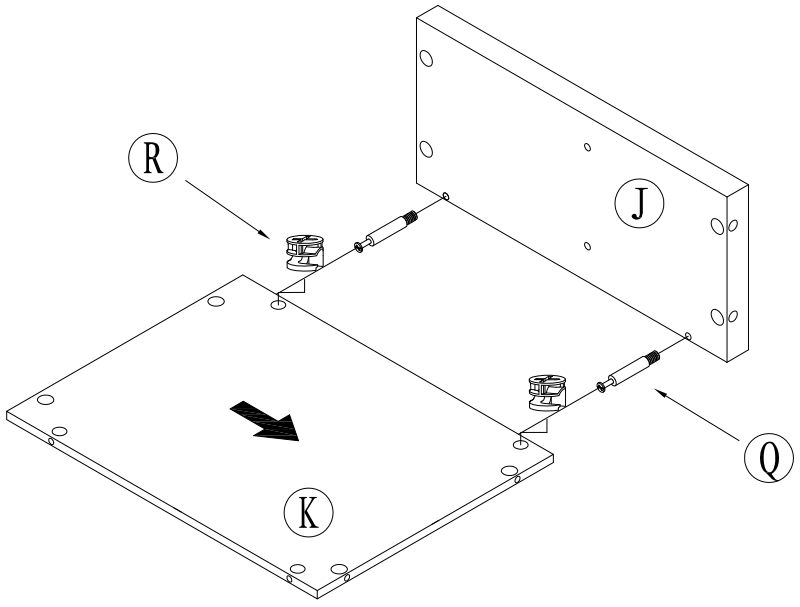

8). ASSEMBLE THE FRONT PANEL(J).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE FRONT PANEL(J).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE SIDE PANEL(K) AND ATTACH USING 2 CAM-LOCKS(R).

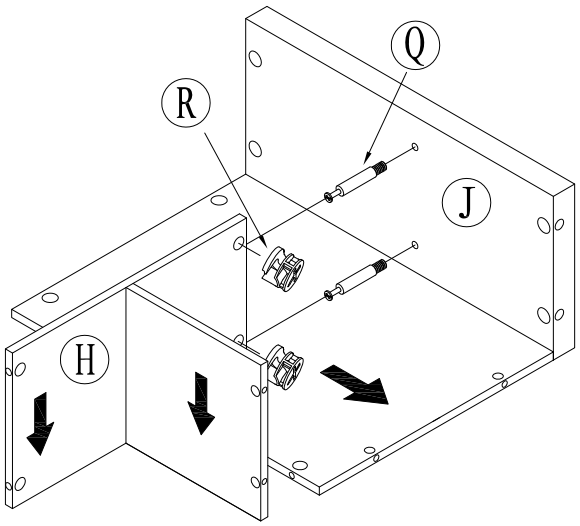

9). ASSEMBLE THE ACROSS PANEL(H).

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE FRONT PANEL(J).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE ACROSS PANEL(H) AND ATTACH USING 2 CAM-LOCKS(R).

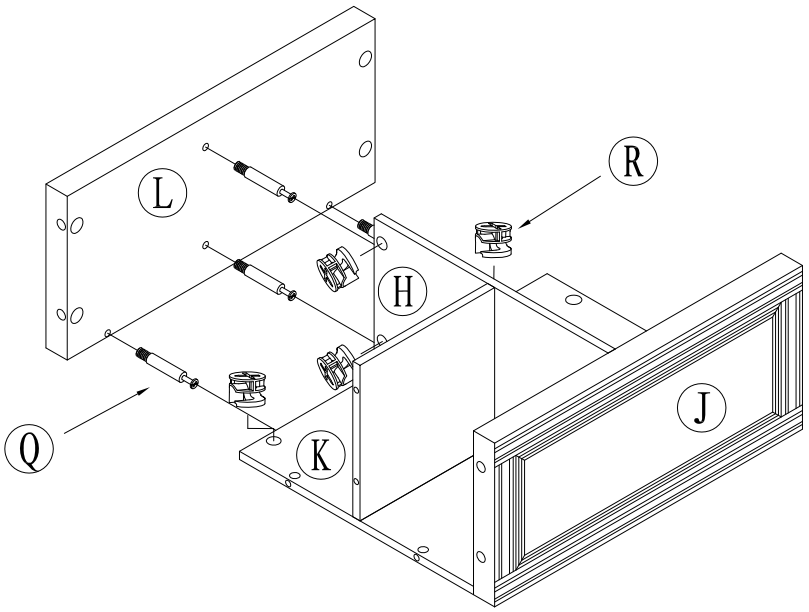

10). ASSEMBLE THE BACK PANEL(L).

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE BACK PANEL(L).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(H/K) AND ATTACH USING 4 CAM-LOCKS(R).

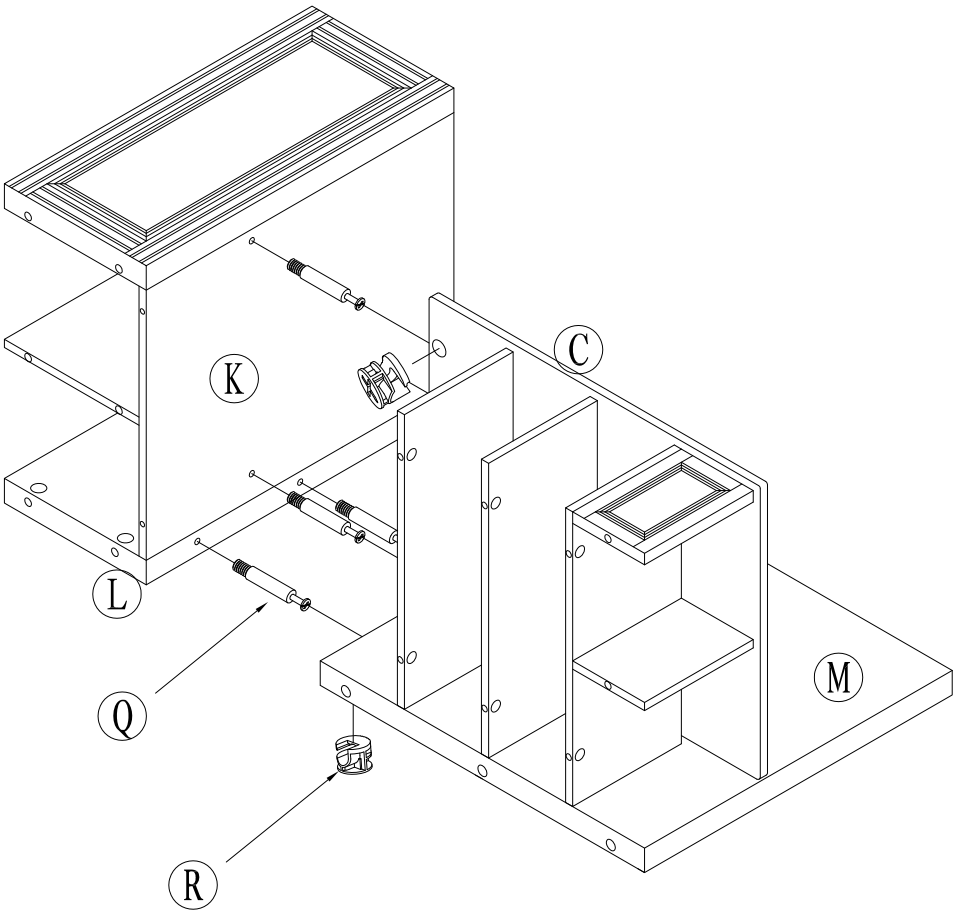

11). ASSEMBLE THE PANEL(K/L).

- ROTATE 5 CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(K/L).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(C/M) AND ATTACH USING 5 CAM-LOCKS(R).

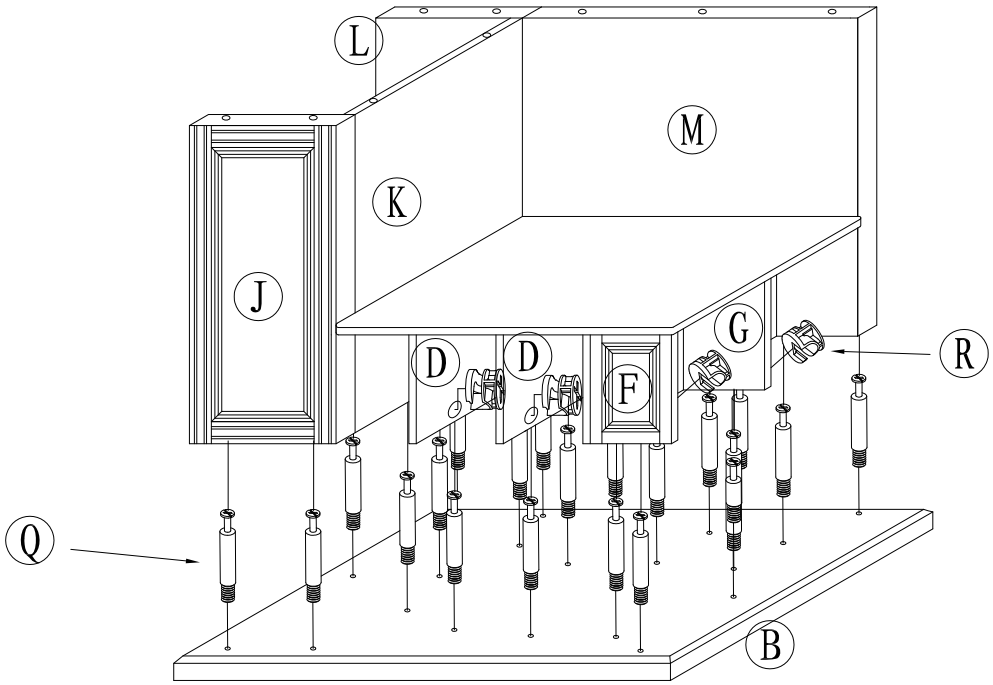

12). ASSEMBLE THE BOTTOM PANEL(B).

- ROTATE 19 CAM-BOLTS(Q) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(D/E/F/G/I/J/K/L/M) AND ATTACH USING 19 CAM-LOCKS(R).

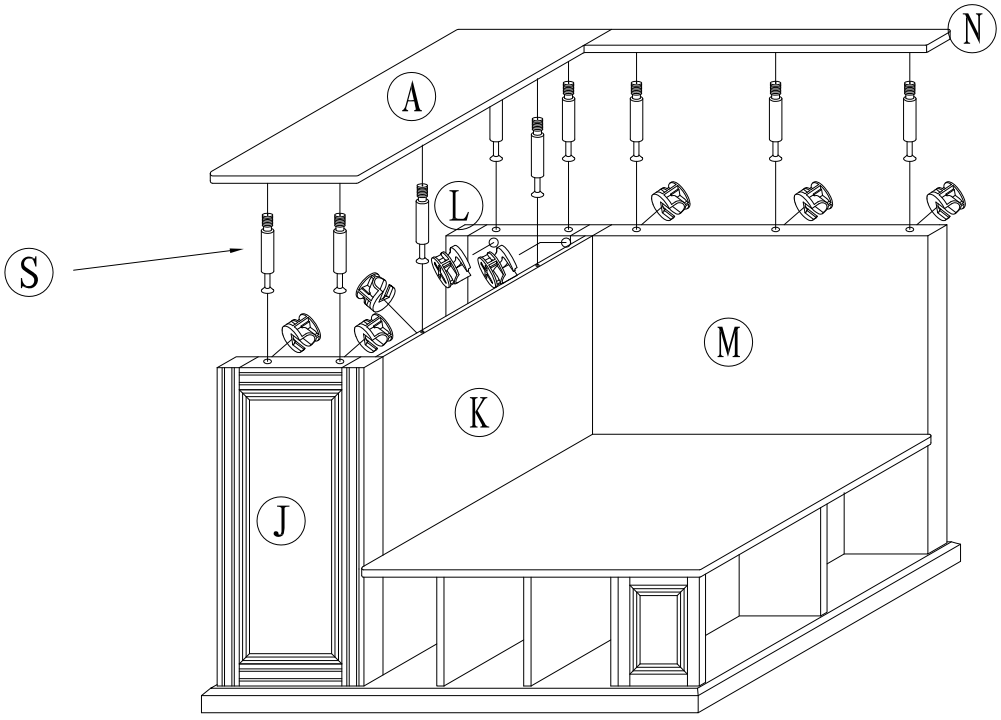

13). ASSEMBLE THE TOP PANEL(A/N).

- ROTATE 9 CAM-BOLTS(Q) INTO THE HOLES IN THE TOP PANEL(A/N).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(J/K/L/M) AND ATTACH USING 9 CAM-LOCKS(Q).

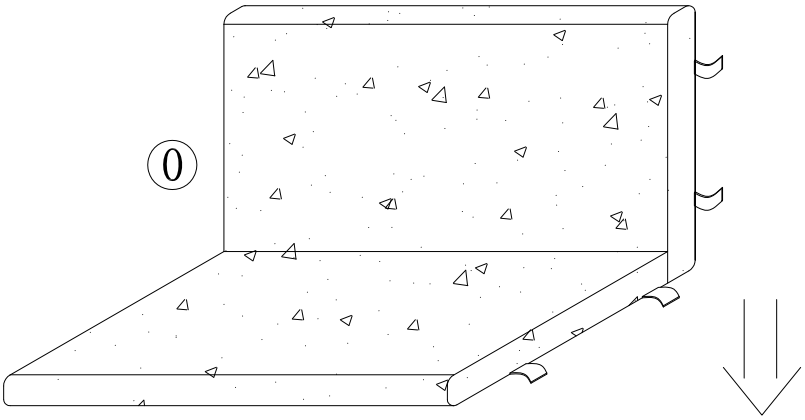

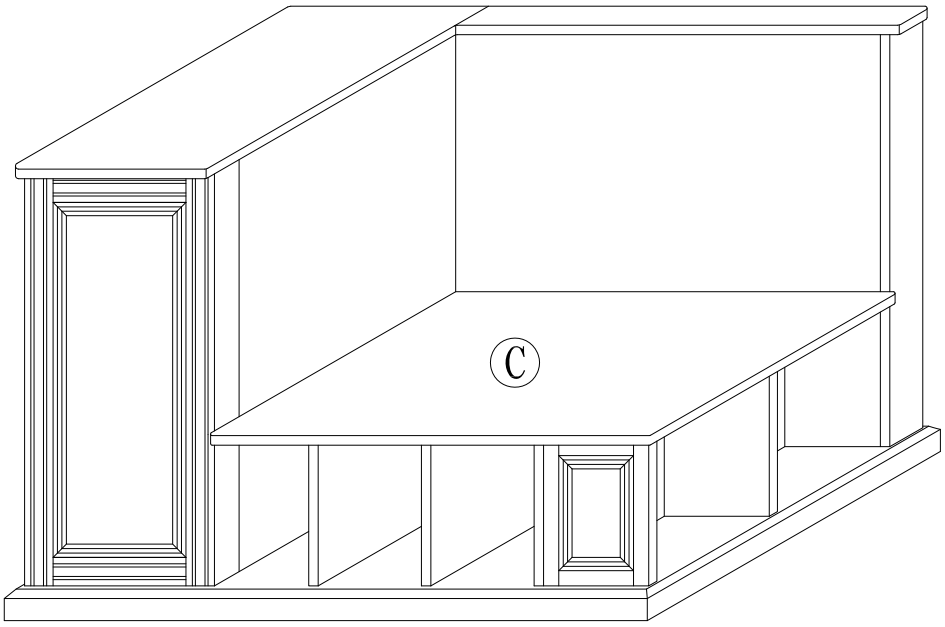

14). ASSEMBLE THE CUSHION(O).

- PUT THE CUSHION(O) ON THE SEAT PANEL(C).